

Precautions

- Read the directions and install the FaucetPal™ with care, making sure not to cross-thread it during installation.
- Do not take apart or in any way alter the FaucetPal™ unit.
- To avoid scalding, make sure that the faucet valves remain at the adjusted settings.
- Buildings with recirculation systems may require installation of a check valve underneath the sink. Please consult a certified plumber.
- After installation, monitor your faucet for up to 72 hours.
- For additional information and product video, please visit www.faucetpal.com.

Need help? Contact us via telephone at 888-611-7681 or via email at info@faucetpal.com

FAUCETPAL™
The Clever Water Lever™

Congratulations on your FaucetPal™ purchase!

Your attractive chrome-finished FaucetPal™ is made from lead-free brass and is completely safe. You've made a choice that makes a real difference. By installing your new FaucetPal™ you'll be on your way to saving over 5,000 gallons* of water per year—and that's just you alone. Not only will you be saving water, energy, and money immediately, you'll be helping to ensure fresh water for generations to come. We thank you.

Now let's get started.

*Learn more at faucetpal.com




Scan this code to see how it works, or visit faucetpal.com

Follow the directions below and turn your faucet into a FaucetPal™ today!

Directions for Installation: Unscrew and remove the aerator at the end of the faucet and remove existing washer. Run the water briefly to remove trapped particles. The FaucetPal™ is designed to fit most standard U.S. faucets. If the device does not fit, it may require a different sized adapter. Check your local hardware store.


FOR FAUCETS WITH FEMALE (INTERNAL) THREADS:

Unscrew and remove decorative ring (A). Make sure that the top gasket (B) is in place above the screen gasket (C). Screw FaucetPal™ into the faucet and tighten by hand. Rotate FaucetPal™ to desired handle position.

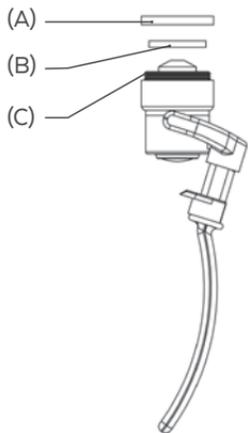


FOR FAUCETS WITH MALE (EXTERNAL) THREADS:

Remove top gasket (B). Leave decorative ring (A) and screen gasket (C) in place on FaucetPal™. Screw the FaucetPal™ into the faucet and tighten by hand. Rotate FaucetPal™ to desired handle position.

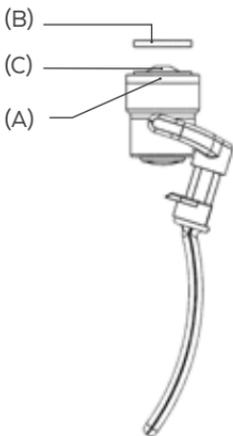

OPERATING INSTRUCTIONS:

After installation of the FaucetPal™ push the handle (D) to the open position, adjust the faucet valves to the desired water temperature and flow. Then, release the handle leaving the faucet valves at the adjusted setting.

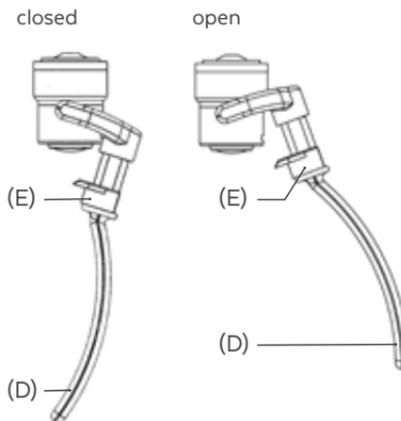

CONTINUOUS FLOW FUNCTION:

To activate the continuous flow function, push the handle (D) back to the open position, slide the Clip (E) up until engaged and release the handle. To disengage the continuous flow function, push or tap on the handle and let the locking disk slide back down. Do not pull the handle to disengage continuous flow function.

